

# Fuji D-6 Compression Plug Installation

- A. Important!!! Do not remove the orange tube from fork! This is needed for the front brake cable installation.
- B. Insert compression plug with orange tube through bolt.



A. & B.

# Fuji D-6 Compression Plug Installation

- C. Pull orange tube from port on fork leg just enough to allow the allen wrench to engage compression plug.
- D. Be sure not to pull orange tube too far!!



C.



C.

# Fuji D-6 Compression Plug Installation

D. After compression plug is tightened, push orange tube back to its original position.



D.

# Fuji D-6 Compression Plug Installation


- E. After compression plug is tightened, push orange tube back to its original position.



E.

# Fuji D-6 Compression Plug Installation

- F. Feed brake cable through top cap and adjust headset using a pin spanner (**tool shown - Park Tool SPA-2 RED**).

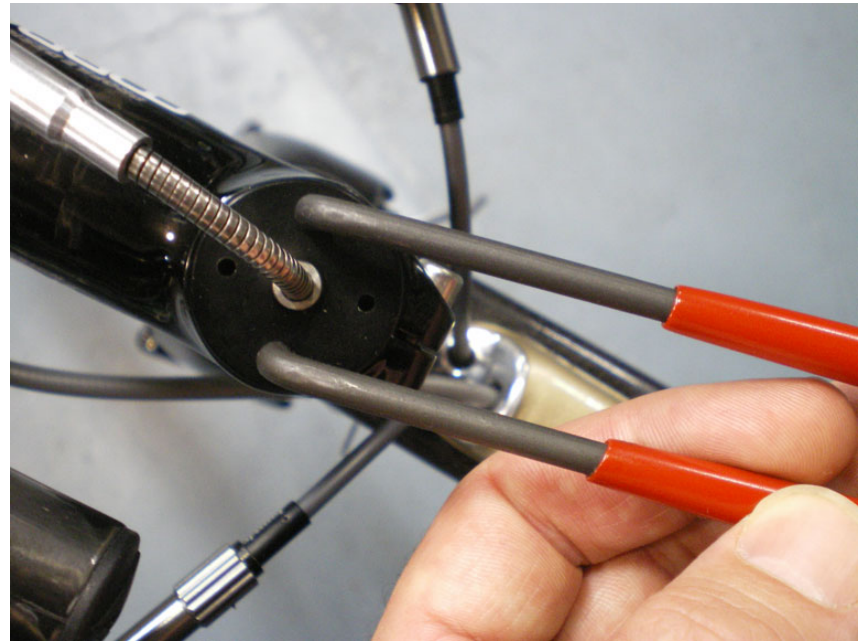

F.